

OPTIONAL FEATURES

can be factory installed or purchased at a later date in kit form.

Zero Speed Shutdown System - Automatically shuts down all the jacks in a set if one jack screw stops turning. The addition of this feature will prevent a Jack set from becoming unequal due to a failure in the drive train.

Upper Overtravel Limit Switch - Prevents overtravel of the lifting bracket in the event of failure of the operating upper limit switch. Provides a means for eliminating the danger of damage to a jack or a raised vehicle should the operating Upper travel limit switch malfunction at the top of the lifting bracket's allowable travel.

Nut Wear Indicator and Follower Nut - Automatically shuts down all the jacks in a set if one jack nut wears beyond its usable life. This dual purpose system allows unseen wear of jack nut threads to be monitored visually and electronically. The follower nut also serves as a safety back up.

Automatic Nut Lubricator - Automatically applies small amounts of lubricant to the lifting screws and nuts, eliminating the problems of over and under greasing of lifting screws and nuts.

ADDITIONAL OFFERED SERVICES

Leasing and Renting

offers short term renting and long term leasing of our jack equipment. Call for details

Inspection and Maintenance - Yearly inspection and maintenance services on used jack equipment are also available

Rebuilding - We offer complete tear down, full inspection and rebuilding services on any used jack equipment.

